



The UK's Foremost Yacht Coatings & Osmosis Specialist
Hardwick Road, Sedgfield, Co. Durham, TS21 2AL, UK
Tel: 01740 620489 Fax: 01740 622072 Email: nigel@passionforpaint.co.uk

(SMM5-KB) Beta Document V1.1.8

Tramex Skipper 5 Knowledgebase Document

Issued: February 2024
Updated: March 2024

Introduction and Intended Uses:

The Tramex Skipper 5 (SMM5), also known as the Tramex Skipper V, is the fifth generation of Tramex Skipper marine moisture meters. Like its predecessors, the Skipper 5 is a non-destructive electronic moisture meter primarily intended for use on Glass Reinforced Plastic (GRP) composites. This includes sandwich construction structures built with non-conductive cores such as polyurethane foam or balsa, but not metallic cores. The meter may also be used on timberwork and masonry. Launch of the Skipper 5 was planned for spring 2020 but was delayed until later that year owing to world events.

The Skipper 5 is particularly useful for monitoring the moisture content of GRP boat hulls during surveys, and by boat owners during winter lift out seasons. Excessive moisture is associated with an increased risk of gelcoat blistering, commonly known as 'Osmosis' or Boat Pox in the USA. The Skipper 5 may also be used to monitor moisture content during osmosis treatments to verify that epoxy and polyurethane coatings may be applied without risk of further blistering, and during repairs to GRP vessels.

The Tramex Skipper V is fitted with a unique three-electrode array to allow genuine deep and shallow measurement ranges, and can transmit test data to popular mobile devices via Bluetooth.®

This document applies specifically to the Tramex Skipper 5 moisture meter (SMM5); but much of the information provided here is also applicable to the earlier Tramex Skipper meters, the sister Tramex ME5 and other manufacturer's instruments.



Passionforpaint.co.uk

History:

The origin and design concept of the Tramex Skipper V can be traced back to the late 1980's when non-destructive electronic moisture meters were in their infancy. There is also a personal connection. Previously the only test for moisture was a piece of clear polythene secured to the yacht's hull, which was intended to 'mist up' if moisture was present; however, this test proved insensitive and unreliable.

The first Tramex Skipper moisture meter was launched in 1987 to compete with the Mk 1 Sovereign Marine Moisture Meter introduced four years earlier. The Tramex and Sovereign meters utilised the same principles of operation, (both were sensitive capacitance type meters), but their designs were quite different: While both manufacturers' approaches were equally valid, the Tramex design arguably provides more meaningful results, especially on heavily laid up GRP composite materials, whereas the Sovereign relies on moisture being within range.

To explain this characteristic, the maximum useful 'depth of field' of any moisture meter is limited by the gap between its electrodes. The gap between the electrodes

on Tramex Skipper meters is nominally 22-millimetres (7/8"), which is nearly ten times greater than the 2½ millimetre (1/10") gap between the electrodes on the Sovereign. This allowed the Tramex meter to detect moisture to a much greater depth than the Sovereign, which was limited to a depth of just two or three millimetres, with sensitivity dropping off rapidly beyond this point. However, very few people understood these limitations at the time.

The often wildly different readings from the Tramex and Sovereign meters sparked considerable debate and disagreement amongst marine surveyors who quite reasonably expected to see comparable readings from both meters, and could not see any obvious reason why this was not the case. However, the reasons were quite simple:

Sovereign Chemicals (now Bostik) manufactured damp-proofing chemicals for buildings where the damp-proof course had failed or were non-existent, so their surveyors needed a reliable moisture meter to identify excessive moisture. By chance, one of Sovereign's managers had an interest in yachting, so with a few adjustments the Sovereign Marine Master came into being.



Fig 1. The rear of the Skipper 5 meter showing the three sensing electrodes.

The original Tramex Moisture Encounter was launched around the same time as the Sovereign, and likewise was initially aimed at the construction industry. However, Tramex's founder, Alan Rynhart also had an interest in yachting which led to the first Skipper meter being launched in 1987.

Crucially, the materials used in the construction industry (principally timber and masonry) are notably homogenous¹ in nature, so any moisture is evenly distributed throughout the sample. Such materials lent themselves to easy and meaningful moisture determinations using a variety of instrument configurations including simple 'pin type' resistance meters.

By contrast, the GRP composites used to build boats are inherently 'laminar' materials, comprised of multiple layers or 'plies' of glass reinforcement and resin bonded together. In practice some of these layers are usually wetter than others.

I was engaged in testing the International Gelshield® system in the International Paint laboratory at Felling at this time (C 1988), and had invited Tramex's Founder Alan Rynhart and Technical Manager Sean Fallon to the Lab to gain a better understanding of moisture meters and their limitations. In comparing the Tramex and Sovereign meters it became clear that the gap between the electrodes was crucial to the depth of field achieved by the instruments in question. It therefore followed that it should be possible to build a moisture meter with three or more electrodes set at differing intervals that would indicate both moisture content, and the depth of any moisture within the composite. I put this forward as a possible design concept during our meeting, which was greeted with enthusiasm, but commercial pressures and the lack of suitable electronics meant that it would be another thirty years before the Tramex Skipper 5 and ME5 instruments would become a reality.

To conclude, there was no particular reason why the respective moisture meter manufacturers had designed their instruments as they did with very different electrode configurations. Non-destructive moisture measurement was in its infancy in the 1980's, and electronic circuits had to be designed around the electrode configurations dictated by case design and other practical constraints. There were no templates, and both designs worked well enough on homogenous materials, but once a design has become established, and users have become familiar with readings, it is difficult to change those designs. Some manufacturers overcame the depth of field limitation by using the Surveyor's hand and body as part of the electronic circuit to allow deeper readings, but this has its own drawbacks including unknown relative humidity when conducting a survey, ground conditions, and even footwear worn on the day.

¹ **Homogenous:** The same composition or makeup throughout. (Homogeneity.)

Design Concept of the Skipper 5 and Moisture Encounter 5 Meters:

All Tramex Skipper and Moisture Encounter meters have a pair of soft-faced electrodes fitted to the back of the instrument spaced a nominal 22 millimetres ($\frac{7}{8}$ ") apart and are numbered 1 and 2 in photograph Fig 1 above. These primary electrodes provide useful moisture detection to a depth of 22 millimetres ($\frac{7}{8}$ ") or greater. A high audio-frequency signal is applied to the electrodes and capacitive coupling used to measure the electrical impedance of the sample. This is unchanged from the earlier Tramex Skipper, Skipper Plus and Moisture Encounter.

However, the Tramex Skipper 5 and ME5 family of meters have a smaller third electrode (No 3) located $1\frac{1}{2}$ millimetres ($\frac{1}{16}$ ") away from the top electrode. This unique three-electrode array allows users to switch between deep and shallow readings on the same instrument to assess moisture distribution in laminar materials such as GRP composites and sandwich structures.

Using the GRP and Shallow Depth ranges on the Skipper 5, readings from homogenous materials such as timber should be the same or very similar on both settings. Any difference in readings from GRP or sandwich structures indicates a greater or lesser accumulation of moisture in the zone indicated.

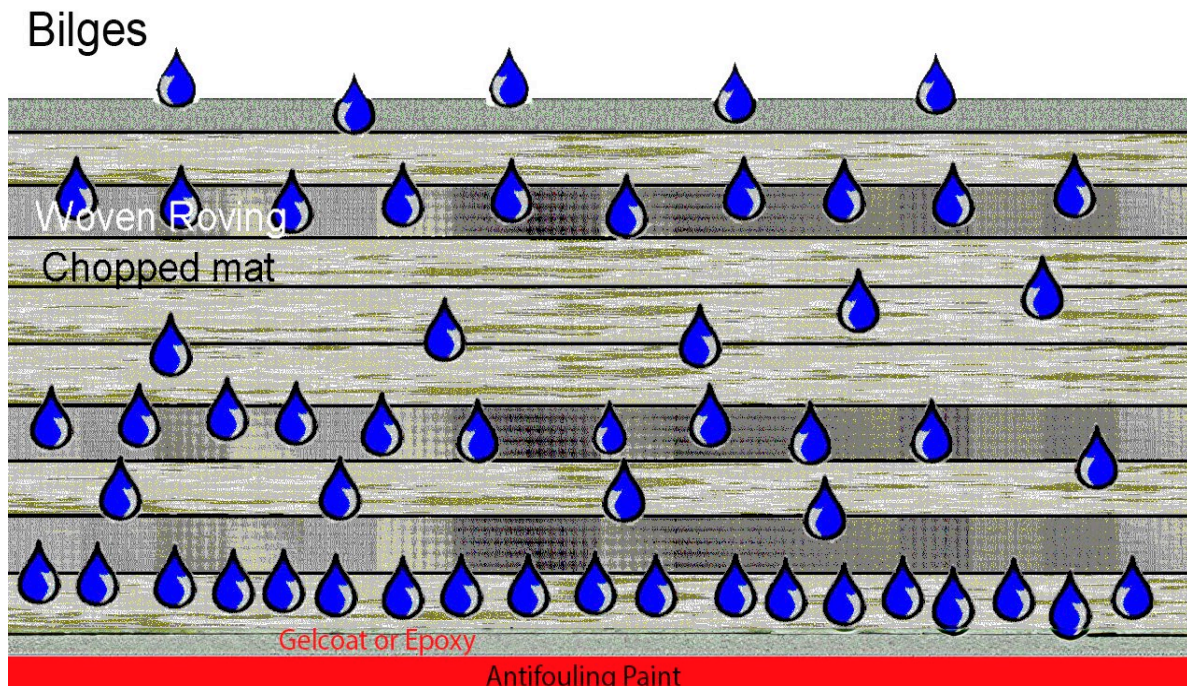


Fig 2. Cross section of a typical GRP hull composite. In this example there is a concentration of moisture immediately behind the gelcoat layer, but moisture will often be found in poorly consolidated layers deeper within the composite, especially in woven rovings and any voids.

Other significant enhancements include Bluetooth® connectivity to allow display mirroring and data logging on paired Android and IOS devices, and an ergonomic soft rubber instrument housing.

Power is now supplied by two 1.5 Volt AA (LR6) cells which provide longer life than 9 Volt PP3 (6LR) batteries while improving weight distribution and handling.

Principle of Operation:

Timber and masonry have good electrical insulation properties when dry, but become increasingly conductive as their moisture content rises. Both materials are essentially homogeneous in nature, so any moisture tends to be evenly distributed throughout the sample. The moisture content of timber and soft masonry can be determined directly by measuring the electrical resistance between two sharp metal pins pushed into the material. By contrast, well consolidated GRP has very good electrical insulation properties whether wet or dry, and is very hard, so a different, non-destructive approach is required.

At the heart of the instrument a crystal-controlled oscillator generates a 1 MHz clock signal. This reference is unaffected by changes in temperature and supply voltage, so user calibration is neither needed nor recommended. The clock signal drives a frequency divider circuit to provide a 32.25 KHz square wave output which is applied to the electrodes. The same frequency is used on all ranges.

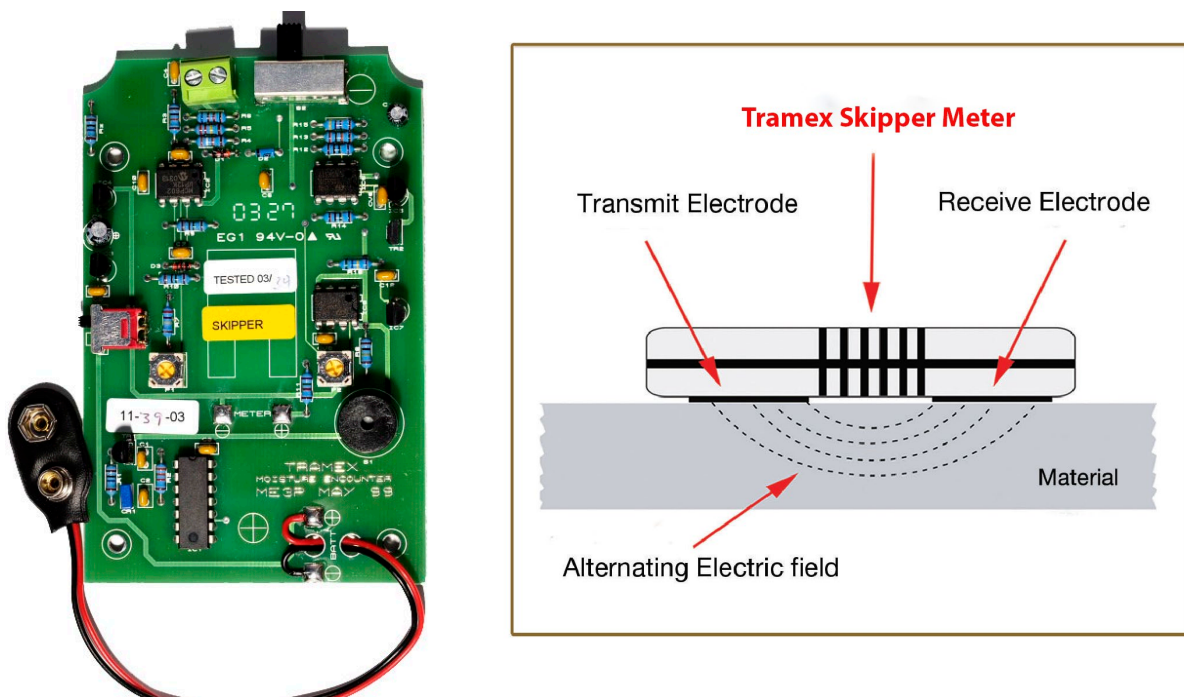


Fig 3. The photograph on the left shows the circuit board from the third generation Tramex Skipper meter. Later Skipper models use much smaller surface mount components but in a similar layout. The 1 MHz crystal-controlled oscillator and frequency divider circuits are at the bottom left. The sounder is at the bottom right above the battery connector. Operational amplifiers will be seen towards the top and right. Cermet multi-turn trimming potentiometers allow fine calibration at the factory.

Using a bridge type circuit the current passing between the electrodes via the sample is amplified to provide an indication of moisture content. Three different levels of amplification are applied to provide three ranges, both shallow and deep, each calibrated for specific materials. Readings are electronically mapped to provide a linear display throughout the measurement range.



Bluetooth® Connectivity:

All Tramex 5 Series moisture meters and data loggers are equipped with Bluetooth® to communicate with the Tramex Meters app which may be installed on compatible Android or IOS mobile telephones and tablets. Android version 11, iOS 13 or above is currently supported, (as of February 2024), but this is liable to change as products and the Tramex app develop. However, please note that use of the Tramex Meters app is entirely optional, and that the Skipper 5 and ME5 remain fully functional as stand-alone meters without a paired mobile device.

Nevertheless, the Tramex Meters app does provides a number of useful functions. The most basic is simple display mirroring, where the instrument's display is replicated on the device screen, but can also provide various types of data logging. Perhaps the most useful for marine surveyors is the ability to take a photograph of the yacht with the mobile device, and to overlay meter readings onto the photograph, which is automatically time stamped and geotagged.

Readings recorded by the Tramex Meters app are percentile representations of full-scale deflection and not % H₂O.

The Bluetooth link is unidirectional (one way) from the meter to the mobile device. The Tramex meter and mobile device need to be paired from the Tramex Meters app before use. However, there is no control of the meter from the app, and no passwords or PIN are required.

Please note that the Bluetooth link is unsecured, and that data may be transmitted to ten metres (33') or more whenever the Bluetooth indicator is lit. In practice an almost unlimited number of users can connect to a single Tramex meter within the above distance, and may download readings from it. This is useful for training exercises or where a boat Owner might want to record their own readings, but could potentially be abused. It is not necessary to be the registered Owner of the instrument to record meter readings.

Product Registration:

Product registration is completed online via the Tramex Meters App. Multiple products can be registered via the same app and mobile device. However, once a product is registered it cannot be re-registered to another user unless Tramex is contacted with proof of ownership to remove the original product registration.

Calibration Standards:

By convention the 'Softwood' range on electronic moisture meters is calibrated against Sitka Spruce (*Picea sitchensis*) and Douglas Fir (*Pseudotsuga menziesii*) because these species are widely used in the construction industry. Remarkably, the properties of these timbers changes very little irrespective of where the trees are grown in the world. Hardwood scales, where these are provided, will be calibrated to compensate for the density of the specified timber.

No scale exists for FRP or GRP composites because the makeup of these materials is so variable; even between seemingly identical hulls produced in the same mould on the same production line. However, research carried out by EOLAS for Tramex and data gathered during the development of the International Gelshield® scheme established that the true moisture content of GRP composites is very roughly 10 ~ 12% of the % H₂O values displayed on the Tramex Skipper 5 set to the Range 2 for GRP. In other words, a reading of 20% H₂O indicates a true moisture content of about 1.8 to 2.2% H₂O. This information may be of comfort to boat owners who worry that elevated moisture readings could result in a loss of buoyancy.

Repeatability:


Electronic moisture meters provide a great deal of useful information, but the limitations of non-destructive moisture measurement dictate that the readings displayed are a close approximation rather than absolute values; especially when testing GRP composites. There are additional factors that can influence readings such as the depth of any moisture, hand pressure applied and atmospheric conditions at the time of survey. The readings provided by a single meter from the same sample should be consistent, but may vary slightly if used by different operatives. Similarly, readings from different Skipper 5 meters may vary slightly on the same sample (typically $\pm 1\%$ H₂O) even when used by the same operative.

In response to feedback from users, readings from the Skipper 5 set to the GRP Range will be found slightly lower (1 ~ 2% H₂O) than the Tramex Skipper Plus.

Routine Calibration Checks (all meters):

The 1 MHz clock signal in the Tramex Skipper meters is crystal controlled to ensure that readings remain consistent irrespective of ambient temperature and battery voltage. Under normal circumstances factory calibration is maintained throughout the life of the instrument, therefore user calibration is neither required nor recommended.

However, if the electrodes on the reverse of the instrument become worn sensitivity may be reduced. Readings may also be affected by mechanical damage to the moving coil display. We therefore recommend that the meter is checked for correct operation on a regular basis.

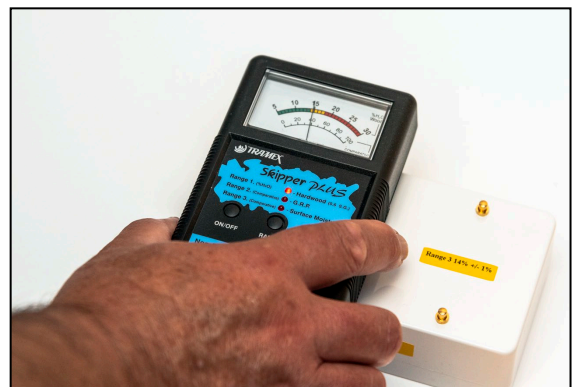

Tramex produces specific Calibration Check Boxes for each of the Skipper meters which allow correct operation to be verified quickly and easily in the field. Alternatively a piece of hardwood kept in a sealed bag will provide a handy reference. Please note that the ME5, Skipper Plus, earlier Skipper and ME meters require different calibration check boxes.

Limitations (Abnormal readings):

In common with other electronic moisture meters Tramex Skipper meters may give abnormally 'high' or 'off scale' readings if used on composites incorporating metals or electrically conductive materials including carbon fibre reinforcement and sandwich structures where aluminium honeycomb is used.

Kevlar reinforcements are not themselves conductive, but some types of Kevlar fibre are treated with graphite which may result in abnormally high moisture meter readings.

Metal reinforcements and fastenings inside GRP structures and chains inside chain lockers will result in abnormally high readings if within range of the meter. Moisture, bilge water and conductive materials will be detected to a depth of 30 mm (1¼") or more which may result in misleading readings where boats are wet inside.

Antifouling Paints:

There is generally no need to remove antifouling paints before taking moisture meter readings.

Granular copper antifouling systems such as Coppebott and Copper Coat will result in higher readings depending on the thickness applied. Graphite based antifouling paints such as Graphspeed will also result in abnormally high moisture meter readings.

Readings should not be taken in sub-zero temperatures because the conductivity of moisture falls rapidly in freezing conditions. Low temperatures also increase the risk of surface condensation.

Battery (SMM5 and ME5):

The Tramex Skipper 5 and ME5 meters are fitted with two AA (LR6) 1.5 Volt cells. These are readily available from chandleries, newsagents, supermarkets and DIY stores. Any type of AA (LR6) cells may be fitted, including zinc-carbon and NiMh rechargeable batteries, but alkaline and lithium cells will provide the longest battery life.

Under normal circumstances an alkaline battery will provide around 18 month's service. However, the soft switching circuitry continues to draw a small current (typically less than 10 µA) even when the meter is switched off. We therefore recommend that the battery is disconnected and ideally removed if the meter is not likely to be used for an extended period. Always carry a spare pair of AA cells!

Automatic Switch Off (Skipper 5, ME5, SMP and MEP):

The Tramex Skipper 5 and ME5 meters use 'soft switching' circuitry to switch the instrument off if it has not taken any new readings for approximately ten minutes, and to retain 'held' readings. The alarm will sound twice just before the instrument switches off. Later SMP and SMP instruments, and all Series 5 meters may also be switched off manually by pressing the On/Off button. If the meter switches off whilst in Hold mode, the held reading will be retained.

Alarm Sounder (Skipper 5, ME5, SMP and MEP):

The alarm will sound to warn of high moisture readings whenever the meter reads more than approximately half scale on any range. This is particularly useful when taking readings in areas where the meter display cannot easily be seen. To turn this feature off, press and hold the On button, then press the Hold button. Repeat this procedure to turn the sounder back on.

Which Range should I Use for GRP?

In the first instance readings from GRP composites should usually be taken with the Tramex Skipper set to the GRP Range (Range 2). This is the most sensitive range on the meter and provides the greatest depth of field. Readings may also be taken using the Shallow Range (Range 3) to help establish the depth of any moisture. However, please be aware that the Shallow Range may not positively indicate the presence of moisture at depths greater than two or three millimetres.

The GRP Range and Shallow Range have very similar sensitivity to moisture, but at different depths within the composite. Moisture in sandwich structures is best measured using the GRP Range.

The guideline readings in the table below all refer to Range two. If the composite is very wet, or if monitoring water ingress into sandwich structures it may be necessary to switch to a less sensitive scale.

Range One is the least sensitive scale and is provided for hardwoods.

Interpreting Moisture Meter Readings:

There is no direct correlation between moisture readings and hull condition; however, many years of experience have shown a clear link between persistently high moisture readings and an increased risk of gelcoat blistering (osmosis) and other problems. High moisture content will also increase weight very slightly and may reduce stiffness; which could be an issue for some racing craft.

It must be stressed that there are many variable factors that can affect moisture meter readings including the thickness of the hull laminate, water and humidity in bilges, nearby tanks and metal fittings, outdoor atmospheric conditions and the length of time since lifting out. Readings should always be backed up by thorough visual examination before any conclusions are drawn or treatment prescribed.

The table below provides some outline guidance when examining GRP hulls and describes the three stages of the osmotic process. The colour scale to the left of the table correlates with the scale on the Tramex Skipper Plus and Skipper V meters. Older Skipper meters used a slightly different scale but the same comments apply.

Please take the time to read and understand these notes before taking readings.

1. Ensure that all surfaces are visibly dry, and that bilges are dry and well ventilated before taking moisture readings.
2. Moisture readings should not usually be taken within seven days of lifting out unless the vessel was built after C1993 and is known to have been laid up with Isophthalic or vinyl ester gelcoat and lay-up resins.

(Isophthalic resins were not widely used in production boat building until the 1990s. Vinyl ester resins are a more recent development, and are less widely used than Isophthalic resins).

3. If readings are unexpectedly high, further readings should ideally be taken a week or two later to see if readings have fallen significantly.
4. Readings given by moisture meters are relative to timber, and do not indicate absolute moisture content in GRP. Furthermore, readings given by different instruments of the same type may vary. The true moisture content of GRP is very roughly 10% of the value given for timber.
5. Moisture readings taken from laminates prepared for full osmosis treatment should fall quickly as soon as the washing phase has been completed (see *The Shorter Guide to Osmosis and its Treatment*). Persistently high readings indicate that hygroscopic solutes are still present, and must be removed by further washing.
6. As a general rule, moisture readings from GRP composites in sound condition should be no higher than from a piece of clean, dry timber (ideally a hardwood) kept in the same atmospheric conditions. Significantly higher readings indicate the presence of hygroscopic solutes.

	Stage/Reading	Interpretation
	Stage 1	‘Dry’ hull effectively in new condition. No evidence of blistering.
	0 ~ 20 Comparative 0 ~ 10% H ₂ O	Readings expected from newbuilds, very dry laminates and repairs, etc.,. Thin laminates may also give readings in this range when dry. An epoxy osmosis prevention scheme may be beneficial at this stage.
	21 ~ 38 Comp. 10 ~ 14% H ₂ O	Typical readings expected from in-service boats after a period ashore. Usual target range specified for application of epoxies for osmosis prevention and treatment. An epoxy osmosis prevention scheme may be beneficial at this stage.
	39 ~ 52 Comp. 14 ~ 18% H ₂ O	Typical readings expected from in-service boats at survey if not dried ashore. An epoxy osmosis prevention scheme may be beneficial at this stage.
	Stage 2:	<u>Persistently</u> high moisture readings but no blistering evident.
	53 ~ 80 Comp. 18 ~ 25% H ₂ O	Some evidence of moisture absorption. Hull may be Stage 2 Osmotic but is unlikely to blister in the short to medium term. Wintering ashore will help to delay any further deterioration. The application of protective epoxy coatings (for osmosis prevention) is not recommended at this stage unless readings fall significantly after a period on hardstanding.
	80 ~100+ Comp. 25 ~ 30%+ H ₂ O	Clear evidence of moisture absorption. Hull may be Stage 2 Osmotic and is likely to blister within a few seasons. Localised blistering may be found on close examination. The vessel may remain in service, but annual monitoring is advised. Wintering ashore will help to delay any further deterioration. Osmosis treatment or the application of protective epoxy coatings (for osmosis prevention) is not recommended at this stage owing to the risk of blistering.
	Stage 3:	High moisture readings accompanied by visible blistering
	60 ~ 100+ Comp. 20 ~ 30%+ H ₂ O	High moisture readings coupled with visible blistering indicate an osmotic hull and may indicate some physical degradation. Provided the hull is otherwise ‘sound’ the vessel may remain in service with regular monitoring. Wintering ashore will help to delay any further deterioration. The application of protective epoxy coatings (for osmosis prevention) is not recommended at this stage owing to the high risk of blistering. A full osmosis treatment should be considered but is best delayed until the hull shows significant evidence of blistering over at least half of the underwater hull area. Any treatment should be started as soon as possible after lifting out at the end of a sailing season. Vessels which have been on hardstanding for extended periods are not good candidates for osmosis treatment owing to the lack of mobility of the solutes responsible for blistering.

All of the readings in this table refer to Range 2 for GRP or Shallow Range on the Tramex Skipper 5.

Known Problems:

The Tramex Skipper and Tramex Moisture Encounter family of meters has proved extremely reliable in service, with many of the original instruments built in the 1980's still in regular service. With the benefit of thirty years' experience of these venerable meters we have identified a handful of minor problems which are easily resolved:

Moving Coil Display (all meters):

The moving coil display is by far the most delicate component in the Tramex meters and is prone to damage from dropping and hard knocks. There are typically two types of problem that may be encountered with the meter movement.

1. Sometimes the needle will stick, or will fail to zero properly, even when the instrument is switched off and the battery removed. This may be caused by physical damage to the meter movement but is more often caused by a static charge on the meter face; especially on new meters. Placing the palm of your hand flat on the meter face may help to remove the charge but will not remove it altogether. A damp cloth (not wet) placed on the meter face for a minute should fully resolve the problem. If the needle remains stuck it is likely that the meter movement is damaged and is in need of replacement.
2. If the meter movement is not responding at all it is likely that one of the springs or fine wires has broken rendering the meter open circuit. This can be confirmed by switching the meter on, selecting Range 2 (GRP) and holding the back of the meter across the palm of your hand. If the LED's illuminate and the alarm sounds but the meter does not register then the movement has probably failed. However, if the alarm does not sound the fault will be found elsewhere. (See worn electrodes below.)
3. If using the Tramex Skipper 5 or ME5 meter, data may still be safely accessed via Bluetooth if the moving coil meter has failed. Readings accessed via Bluetooth will not be affected by a faulty moving coil display.

The moving coil display for the SMP and MEP is plugged into the circuit board and is easily replaced, but we would recommend that you purchase a Calibration Check Box at the same time to verify correct operation on completion. If you are not confident to replace the meter movement we can easily do this work for you.

Spurious (High) Readings (all meters):

We have seen a small number of meters which give spurious (high) readings at switch-on and during operation. These readings often change wildly as the meter is moved or handled. The meters concerned are usually older instruments which have travelled a lot, especially by air, have been exposed to high temperatures, and/or have been subject to vibration.

On investigation it was found that the four screws securing the circuit board into the case had become slightly loose. One of these fastening points provides a

ground connection between the circuit board and a copper RF shield bonded into the back of the instrument. This shields the sensitive circuitry on the circuit board from the electrodes, but if the connection is lost the shield becomes inoperative.

This problem is resolved by opening the case and gently tightening the four screws retaining the circuit board. Please note that the threads in the plastic case are easily damaged. If the threads become stripped apply a single drop of Superglue to the affected screws before refitting them.

Worn Electrodes (all meters):

The electrodes on the Skipper and ME meters are a co-planar design with self-adhesive backing, a foam core and a conductive rubber composite layer at their surface. The conductive layer has small ‘tabs’ which connect to the circuit board inside the instrument. The electrodes are quite hardwearing but with regular use the conductive layer will wear thin and lose some conductivity resulting in a slight, but measurable loss of sensitivity. This is typically about 2 or 3% H₂O on Range 2 for GRP at mid-scale. Dragging the meter across surfaces accelerates this wear. The electrodes have a distinct surface pattern when new which gradually wears away.²



Worn electrodes like these will reduce sensitivity.

If the electrodes appear shiny and worn rather like old car tyres with no tread they should be replaced. Eventually the small ‘tabs’ connecting the electrodes to the circuit board will break rendering the meter inoperative, although the LED’s will still be illuminated.

New electrodes can be supplied for all Skipper and ME meters including the very first instruments in this series. However, fitting the new electrodes is a tricky operation because of the need for precise placement. The self-adhesive backing is also extremely sticky so there is little chance of repositioning the electrodes if they are not fitted in the correct position. We therefore recommend that your meter is returned for repair and a calibration check. Where possible we always record calibration results before and after repair.

Short Battery Life:

With normal use new alkaline cells should provide at least 18 month’s service in the Skipper 5 and ME5 meters. These instruments use ‘soft switching’ circuitry to switch the instrument off if it has not taken any new readings for approximately ten minutes, and to retain ‘held’ readings. However, the soft switching circuitry

² Tramex Skipper Plus meters produced from late 2019 onwards and Skipper 5 meters are fitted with smooth faced electrodes which are much harder wearing.

continues to draw a small current (typically less than 10 μA) when the meter is switched off.

If you find that your meter is discharging more quickly it is likely that it isn't switching off after use. Handling or constant movement will prevent the meter from switching off automatically. On later models it is possible to switch off manually by pressing and holding the On/Off button. For other instruments make sure they have switched off before placing them in their protective pouches.

The battery should be disconnected and ideally removed if the meter is not likely to be used for an extended period. Always carry a spare PP3 battery!

The older Skipper and Moisture Encounter instruments used physical switches and did not use any current whilst switched off.

Battery Compartment Cover (all meters):

The battery cover should be opened by inserting a screwdriver or key into the slot. Lift the cover by gently pressing on the securing tab whilst lifting the cover towards you. Take care when opening the compartment as the tab can be broken off. Spare covers are currently available for the Skipper 5, SMP and MEP meters. A limited number of covers are available for older meters.

Immersion in Water (all meters):

Your Tramex Skipper meter is not waterproof! If you are unfortunate enough to drop your meter into water very prompt action is needed to have any chance salvaging it. The first priority is to remove the batteries to minimise electrolytic corrosion and to prevent other damage to the circuitry.

The greatest enemy of electronic equipment is salt, which is both conductive and corrosive. Worse still, salt is deliquescent, which means that it absorbs atmospheric moisture to maintain a permanently corrosive solution which will cause permanent damage to electronic components, especially if the battery remains connected.

The advice provided below applies to full immersion where water enters the meter casing. Superficial splashes should be wiped off with a clean cloth damped in clean water before placing the meter in a warm dry place and allowing it to dry.

Fresh Water Immersion:

Remove the battery immediately. If possible open the case to encourage removal of any water. Retain the lanyard, all screws and parts for refitting. Dry the instrument in a warm dry place such as an airing cupboard and then place into a sealed polythene bag with either a bag of silica gel or rice as a desiccant for a few days before reconnecting the battery. Calibration must be checked before any further use. In practice it is likely that the moving coil meter at least will need to be replaced.

Salt Water Immersion:

Remove the battery immediately and contact us for further advice.

Fault Finding Summary:

Fault	Check
Meter does not operate:	Check that battery is fitted and connected properly. A 9Volt PP3 (6LR61) type battery is required. Always carry a spare battery!
LED's cycle at switch on.	Battery is exhausted. Replace battery before using the meter.
LED's illuminated but meter does not respond.	1) Hold feature enabled. Press the Hold button to resume normal operation. 2) Electrodes worn or electrode tab broken. These are replaceable. 3) Moving coil meter broken. These are replaceable.
Meter does not zero.	The moving coil movement may be damaged or could be affected by static electricity. Apply a damp cloth over the meter movement to remove any static charge. Otherwise replace the meter movement.
Intermittent spurious (high) meter readings.	Intermittent connection between the circuit board and copper shielding foil inside the meter case. Resolved by tightening the four screws securing the main circuit board. This usually affects older meters that have travelled extensively.

Index:

Abnormal readings	Product Registration.....6
Antifouling systems.....8	The Tramex Meters App6
Carbon Fibre Reinforcements8	Calibration
Copperbot, Copper Coat.....8	Industry Standards:.....7
Freezing conditions8	Repeatability:7
Graphspeed.....8	Routine Calibration Checks:7
Kevlar Reinforcements.....8	True moisture content of GRP7
Metal Reinforcements and Fastenings8	Construction Industry
Spurious readings12	Origins of Marine Moisture Meters2
Alarm Sounder9	Immersion in water
Automatic Switch Off9	Fresh water14
Battery8	Salt water.....14
Battery Compartment Cover	Known Problems
Broken Tab14	Moving coil display.....12
Opening14	Short battery life.....13
Battery Life	Spurious readings12
Current drain in standby mode9	Worn electrodes.....13
Bluetooth	Range Selection.....9
Basic Operation6	



Nigel Clegg Associates
Yacht Coatings and Osmosis Specialist
Hardwick Road, Sedgefield, Co Durham TS21 2BW
Tel: +44 1740 620489 **Fax:** +44 1740 622072
e-mail: Nigel@passionforpaint.co.uk
Web: www.passionforpaint.co.uk

Disclaimer: This is a Draft document. Please note that whilst every effort has been taken to ensure the accuracy of information contained in this document, no responsibility can be accepted for any errors or omissions that it may contain. The advice provided is based on many years of practical experience in the field and is offered without charge, but is necessarily general in nature and cannot cover every eventuality. If you have a specific question that is not covered by this document please get in touch.